

Ignition must be in the ON position before operating the system

Function	How to use
Power on	Press the ON button momentarily, then release.
Look left	Press the left arrow button.
Look right	Press the right arrow button.
Look down	Press the down arrow button.
Look up	Press the up arrow button.
Hitch View	Press the Hitch View button briefly.
Rear View Mirror position	Press the Rear View/Fan button briefly.

## Fan control

- To turn the fan on, press and hold the Rear View/Fan button for at least 1 second.
- To turn the fan off, press and hold the Rear View/Fan button again for at least 1 second.
- If left on, the fan automatically times out after about 5 minutes.

## Recalibrate centering mechanism

Press and hold the Hitch View button for more than 1 second.

