



ECU PROGRAMMING INSTRUCTIONS

To enter programming mode, press and hold the ON button until all three LEDs light up, then release. If all three LEDs are not illuminated, the system is not in programming mode and Step 1 must be repeated.

Resetting stop positions

Set left horizontal stop: Enter programming mode. Using the remote keypad, adjust the camera to the desired stopping point. Allow about 1/8 inch of additional travel due to camera momentum. Press the ON button and the left arrow button at the same time, then release. The center and right LEDs will go out. The left stopping point is reset.

Set right horizontal stop: Follow the same procedure as the left horizontal stop, but use the right arrow button.

Set down stop: Follow the same procedure as the left horizontal stop, but use the down arrow button.

Set up stop: Follow the same procedure as the left horizontal stop, but use the up arrow button.

Preset views

Set Hitch View: Center the camera by pressing the Hitch View button. Enter programming mode. Position the camera to the desired hitch view, then press the ON button and the Hitch View button at the same time and release. The Hitch View is reset.

Set Rear View Mirror view: Briefly press the Rear View/Fan button to center the camera to the rear-view position, then enter programming mode. Position the camera to the desired vertical view, then press the ON button and the Rear View/Fan button at the same time and release. The Rear View Mirror view is reset.